

4DTV Users

Your new universal remote will need to be programmed with the proper code before it will work with your 4DTV receiver. Please follow these simple steps to address the remote to your receiver properly.

Step 1: Press the **SAT** and the **ENTER** button down simultaneously for 3 seconds. The LED will light up and stay lit.

Step 2: Key in the 3-digit code of **003**.

Step 3: Press the **SAT** button. The LED will blink twice to confirm the code has been stored.

NOTE – If the remote does not operate your receiver after following the above steps you may need to set your receiver's remote address as well. Please follow these steps to set the receiver's address.

Step 1: On the front panel of your 4DTV receiver, press the **UP** and the **DOWN** arrow buttons simultaneously for 1 second.

Step 2: The front panel will display a code (A0, A1, A2 or A3). Press the **UP** arrow until it displays **A0**.

Step 3: On the front panel press the **ENTER** button.

Volume control – This remote is defaulted to work your television's volume while in the Satellite mode. To change it so the remote works the 4DTV volume control while in satellite mode follow these steps.

Step 1: Press the **SAT** and the **ENTER** button down simultaneously for 3 seconds. The LED will light up and stay lit.

Step 2: Press the **VOL +** button.

Step 3: Press the **SAT** button. The LED will blink twice to confirm its programming.



Form 600-134-0309