

G3 Tuning

(The following will work only if you have G4 programmed in.)

- 1) Position your dish on satellite G4.
- 2) Press 'Options', 6, 4, 4 and then 'Enter'.
- 3) Write down what your skew is set at. Include both 'H' and 'V' skews.
- 4) Press 'Go Back' then 'Enter'.
- 5) Highlight G3 and press 'Enter'. If you are prompted to 'Change Settings', press 'Enter'.
If you are not, continue to the next step.
- 6) Change your channel to 500.
- 7) Change your 'H' skew to the same setting you wrote down in Step 3. Now change your channel to 24. This will change the cursor over to the 'V' and allow you to change this to the setting you wrote down in Step 3. Once you have changed both settings, return to Channel 500.
- 8) Press the arrow up until the number for 'Dish Position' is highlighted.
- 9) On the bottom of your screen you will see a 'Signal' box and a 'Quality' box. Start pressing the left arrow one at a time while watching the 'Quality' box. Continue to press the left arrow until the 'Quality' number starts to change. Optimize that number to the highest you can get. (NOTE: you may need to move your dish position as many as 40-50 numbers before you see a change in 'Quality'.)
- 10) Once you have reached the highest 'Quality', press 'Go Back' then press 'Enter'.
- 11) Press either 'Exit' or 'View', whichever button you have.

G3 should now be programmed in. If you experience any problems, please call our toll-free Tech Support line at 800-500-9279.